




Lighting Coil Wiring - Connection of Yellow Wires *AC or DC Power Set-up*

AC Power: If the stator has two yellow wires coming from it and you want to have AC power output, connect up either of the yellow wires to the headlight and the other to ground. **Note:** You will need to put an AC regulator (ESR012) between the headlight and the stator to prevent bulbs from blowing out.

OPTIONAL: DC Power: For DC power, run both of the yellow wires to a regulator rectifier (Not Shown). Follow connection instructions for your specific regulator rectifier for more details.

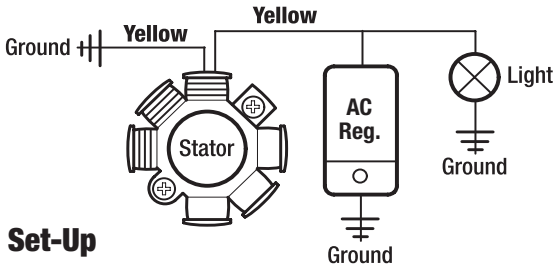

AC Set-Up