




3803 Oceanic Drive
Ste 201
Oceanside, CA 92056
Phone: 760-842-8300
Fax: 760-842-8306
www.electrosport.com

ESG210 Fitting Instructions



Supplied ESG210

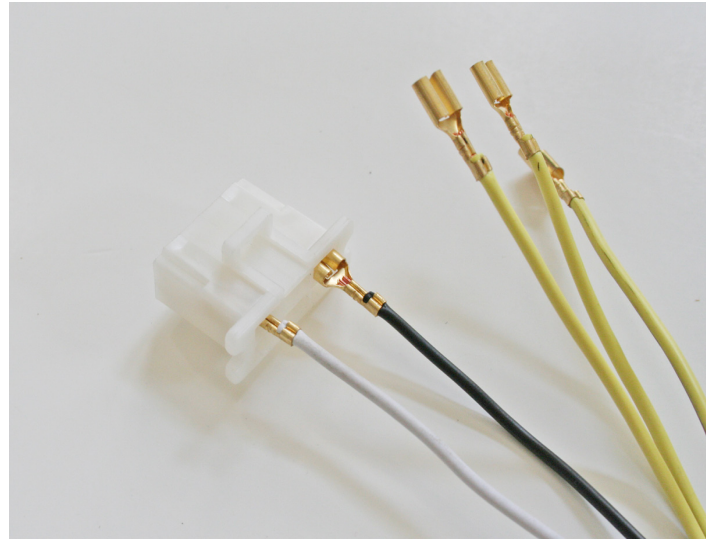

Connector Fitting

Read these instructions completely


Step 1. On your OEM part, you will need to pull off the existing grommet. To do this, simply feed one wire at a time through the grommet.

Step 2. Take the grommet and reverse the procedure to install the grommet on the new replacement part.

Fitting connector and pin out pattern

Step 3. Please refer to Figure 1 which shows the pin out detail for the connector on your new part. Insert each lead into the connector and make sure they are fully seated.

- PIN 1 - White**
- PIN 2 - Open**
- PIN 3 - Black**
- PIN 4 - Yellow / Black**
- PIN 5 - Yellow / Black**
- PIN 6 - Yellow / Black**

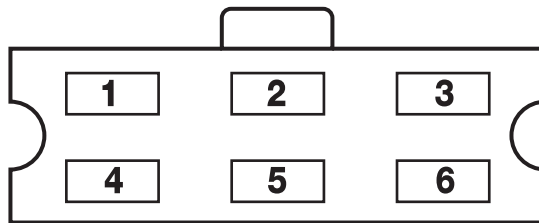

Note: . On pins 4, 5 and 6, There is not a set order required for the YELLOW / BLACK wiring.

Figure 1